

AKEBONO

OB-360 N



Spare Parts List

Code Figur	Part No.	Description
1	ND04W108A	Cam Bracket
2	S6D06-24A	DC Motor
3	S6DA50B1-R23	Gear Head
4	ND04Z101A	Cam Shaft
5	0499-104090	Key 5x5x90
6	ND04Z103A	Opener Cam
7	ND04Z102A	Collar (E)
8	ND03Z111A	Separator Cam
9	ND03Z120A	Collar (D)
10	ND04Z105A	Rear Grip Cam
11	ND03Z113A	Slide Table Cam
12	ND04Z104A	Press Cam
13	ND03Z115A	Pressure Cam
14	ND04Z106A	Front Grip Cam
15	ND03Z119A	Collar (C)
16	ND03Z117A	LS-3 Cam
17	OB300111	Collar (A)
18	ND03Z118A	LS-4 Cam
19	OB300112	Collar (B)
20	6003ZZ	Ball Bearing 6003zz
21	7503-A	Washer
22	ND04Z306A	Opener Arm
23	ND04Z307A	Opener Shaft
24	634ZZ	Ball Bearing 634zz
25	ND04Z606A	Roller Bracket A
26	12622	Pin
27	ND01E613A	Roller
28	ND04Z313A	Bracket (Limit Switch)
29	0750-110254	Micro Switch VX-015-1C23
30	ND03Z709A	Plate Nut
31	0740-160035	Nylon Clip NK-4N
32	ND04Z304A	Collar (Fulcrum Shaft)
33	ND04Z305A	Fulcrum Shaft
34	ND03Z314A	Separator Arm (A)
35	ND03Z315A	Separator Arm (B)
36	ND03Z311A	Table Arm
37	ND03Z312A	Link
38	ND03Z313A	Link Pin
39	ND04Y303A	Slide Table
40	ND03Z306A	Table Hook
41	OB300508	Pressure Arm
42	ND03Z512A	Spring Post
43	ND04Z320A	Fulcrum Spring
44	GS-6.0	Snap Ring
45	ND04Z311A	Separator
46	ND03Z305A	Separator Hook
47	ND04Z312A	Center Guide(Upper)
48	ND04Z322A	Center Guide
49	ND04Z316A	Switch Bar
50	12309-A	Return Spring
51	ND04Z301A	Base Guide A
52	ND04Z302A	Base Guide B
53	ND04Z317A	Sensor Bracket
54	ND04Z908A	Proximity Switch
55	ND04Z204A	Plunger


Code Figur	Part No.	Description
56	ND03Z206A	Plunger Spring
57	ND04Z205A	Plunger Pin
58	624ZZ	Ball Bearing 624zz
59	7212	Spring Hook
60	50208	Return Spring
61	ND04Z203A	Front Gripper
62	ND04Z201A	Head
63	ND04Y210A	Heater
64	ND04Z208A	Insulating Plate A
65	ND04Z209A	Insulating Plate B
66	ND04Z207A	Insulating Bush
67	ND03Z407A	Carbon Ribbon Line (A)
68	ND03Z408A	Carbon Ribbon Line (B)
69	ND04Z202A	Rear Gripper
70	ND04Z206A	Front Gripper Support
71	ND03Z406A	Press Head Support
72	ND1SE092A	Spring Hook
73	OB300316A	Spring
74	ND04Z308A	Table Support
75	PM2-LH10B	Photo Sensor
76	ND04Y319A	Rocker Arm
77	ND04Z321A	Rocker Shaft A
78	MGA828ZZ	Rubber Mold Bearing
79	ND04Z505A	Rocker Collar
80	ND03Z514A	Spring
81	0890-321120	Washer WSSM 14-10-1
82	0611-026900	Ball Bearing 6900zz
83	ND04Z501A	Collar (Bearing)
84	ND04Z310A	Fulcrum Pin (Rocker Arm)
85	ND03Z611A	Guide Roller
86	ND04Y601A	Inlet Guide
87	ND04Y615A	Guide Cover
88	ND04Z619A	Under Cover
89	ND04Z503A	Drive Roller
90	0810-160060	Coupling MOR-20-8-10
91	ND04Z504B	Spacer (Motor Bracket)
92	ND04Z502A	Motor Bracket
93	0780-190070	Brushless Motor HPS4-316B
94	ND04Z309A	Spring Hook
95	ND04Z626A	Location Washer
96	0299-000573	Socket Button Head Cap Screw
97	ND04Z625A	Location Plate
98	ND03Z515A	Spring Hook
99	ND04Z324A	Spring (Rocker Arm)
100	ND2SE050A	Spring Hook
101	ND04Y621A	Side Guide
102	0691-130036	Slide Rail TM-232-1
103	ND04Y640A	Slide Base
104	0611-020694	Ball Bearing 694zz
105	ND04Z610A	Tape Stopper A
106	ND04Z611A	Tape Stopper B
107	ND03Z619A	Cushion Rubber
108	0890-321121	Washer WSSM 14-5-2.5
109	ND04Z624A	Discharging Brush
110	ND04Y616A	Side Gide Bracket L

Code Figur	Part No.	Description
111	ND04Z639A	Band Rail L
112	ND04Z603A	Opener Shaft
113	ND04Z608A	Roller Bracket C
114	ND04Y618A	Side Guide Bracket R
115	ND04Y638A	Band Rail R
116	ND04Z612A	Corner Block
117	ND04Z602A	Corner Shaft
118	ND04Y622A	Top Guide
119	ND03Z632A	Roller Pin
120	ND03Z656A	Washer
121	ND04Z641A	Wire Rope (B)
122	ND03Z647A	Wire Rope (C)
123	ND04Z642A	Wire Hook
124	ND04W627A	Band Guide F1
125	ND03Z618A	Opener Bar
126	ND04Z604A	Opener Block A
127	0520-300071	Bush R-MLE0610
128	ND04Z623A	Plate Nut
129	ND04Z620A	Opener Block C
130	ND04Y617A	Plate Cam
131	ND04Y633A	Band Guide F2
132	ND04Y635A	Band Guide FR3
133	ND04Y636A	Band Guide F4
134	ND04W628A	Band Guide R1
135	ND04Y634A	Band Guide R2
136	ND04Y637A	Band Guide R4
137	22423	Spring
138	ND04W707A	Body Frame
139	SA9RK-34	Rubber Feet
140	SA-10NG-F	Grommet
141	0740-230038	Canoe Clip
142	ND04Y706A	Rear Cover
143	ND04Y708A	Top Plate, Front
144	ND04Y709A	Top Plate, Rear
145	ND04Y703A	Front Door
146	YS-002	Magnet Catch
147	ND04Y701A	Arch
148	ND04Y702A	Arch Cover
149	ND04Y710A	Front Guide
150	ND04Y704A	Right Side Guide R
151	ND04Y705A	Left Side Guide R
152	ND04Y805A	Band Guide B
153	ND04Z803B	Paper Core Holder
154	ND04Z806A	Holder Block
155	ND04Z801B	Collar (Brake)
156	ND04Z802B	Holder Pin
157	696ZZ	Ball Bearing 696zz
158	ND04Z804A	Brake Base
159	11203110124V	E.M. Brake (24 VDC)
160	ND03Z650A	Anti Statics Discharging Brush
161	900-06-10160	Fan Motor
163	ND04Y907A	Switch Board
164	RV24YN20SB10	Variable Resistor
165	K-4071	Knob
166	ND04Z905A	Cover

[illegible]


Sealing Unit
(Illust No. 1-4)


Arch Band Guide Unit
(Illust No. 5)

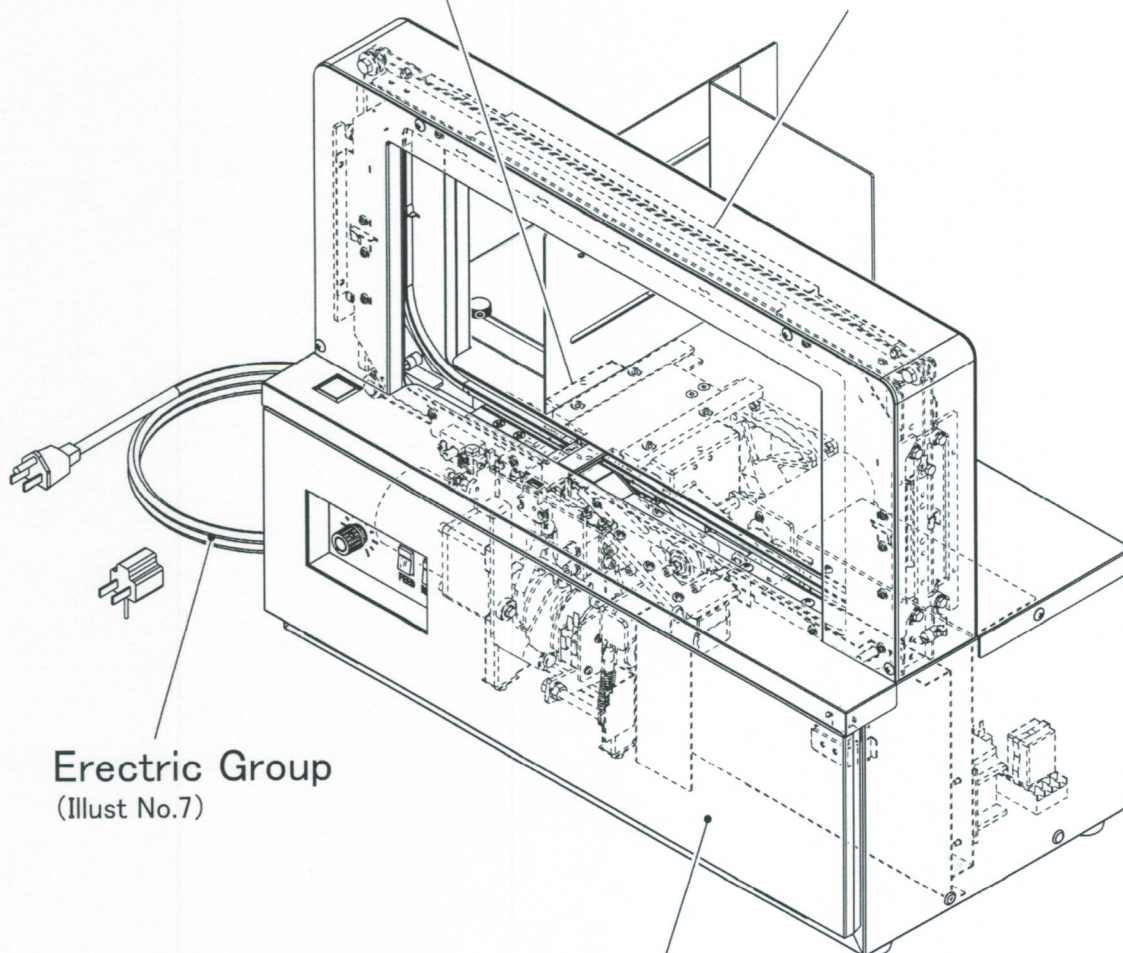



Electric Group
(Illust No.7)


Body Unit
(Illust No.6)

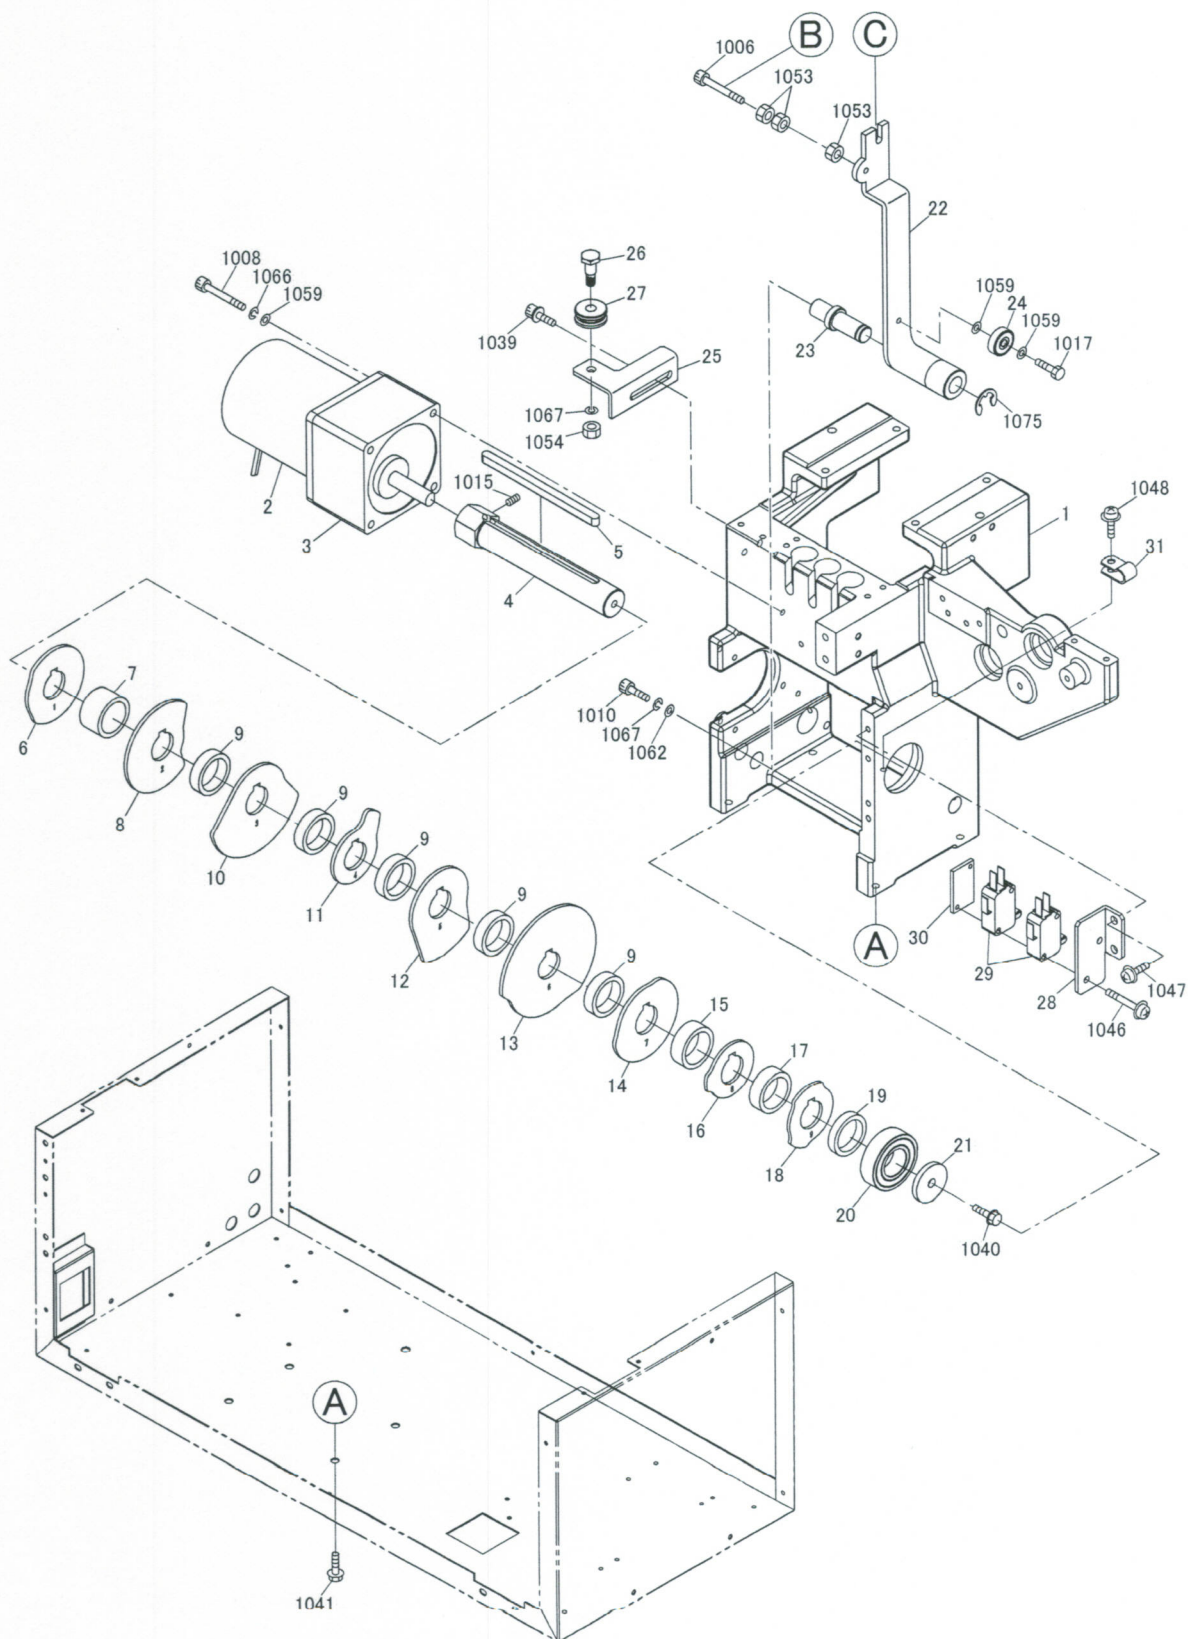

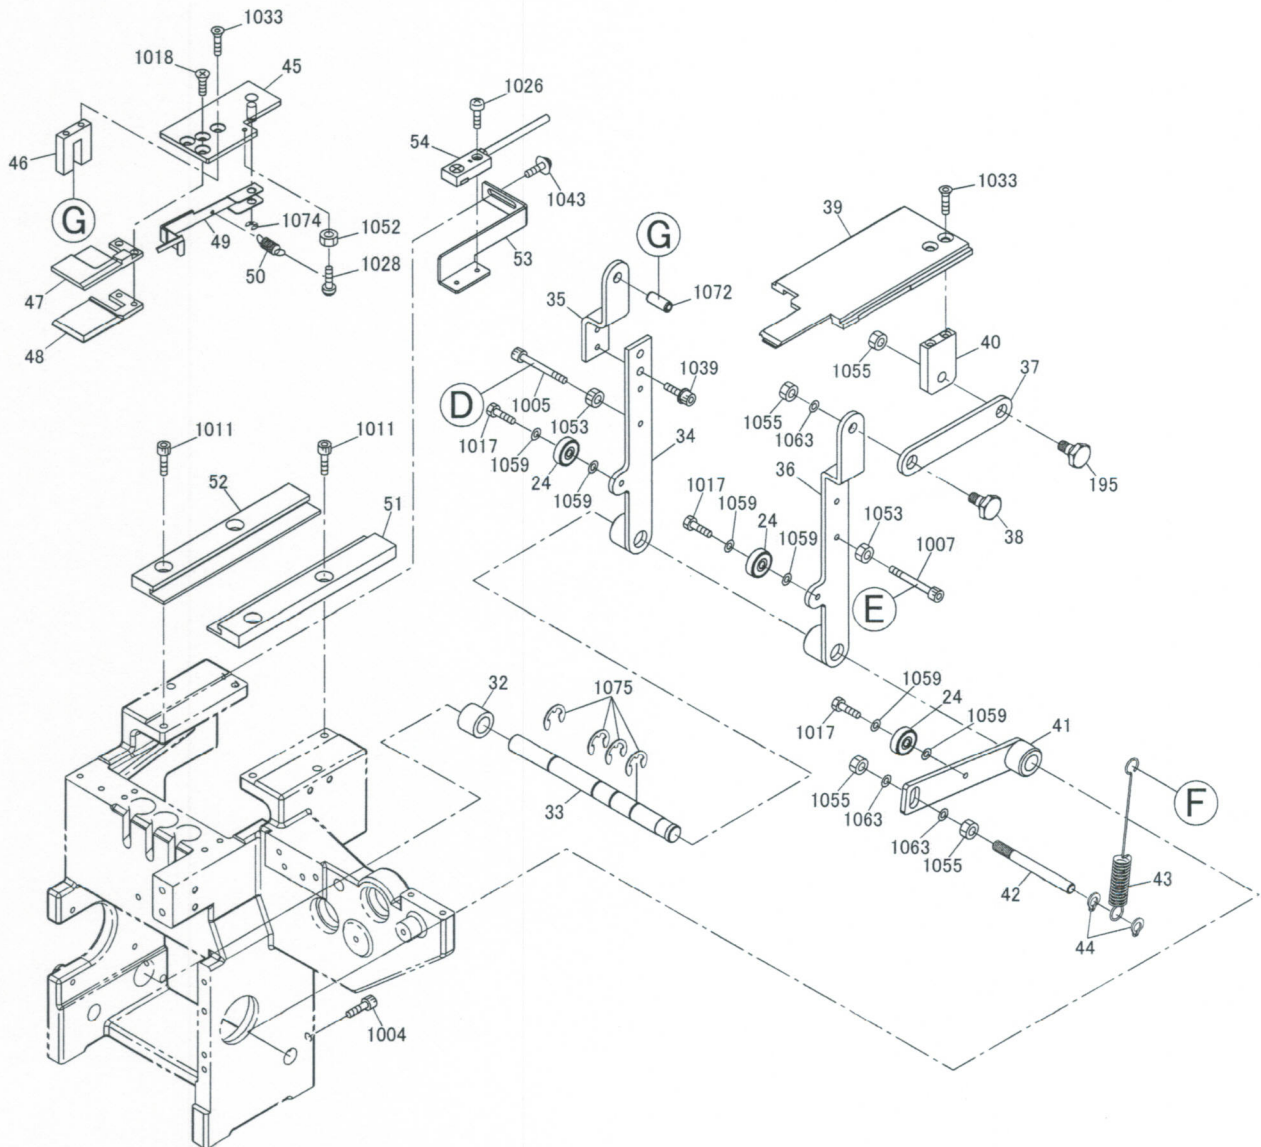

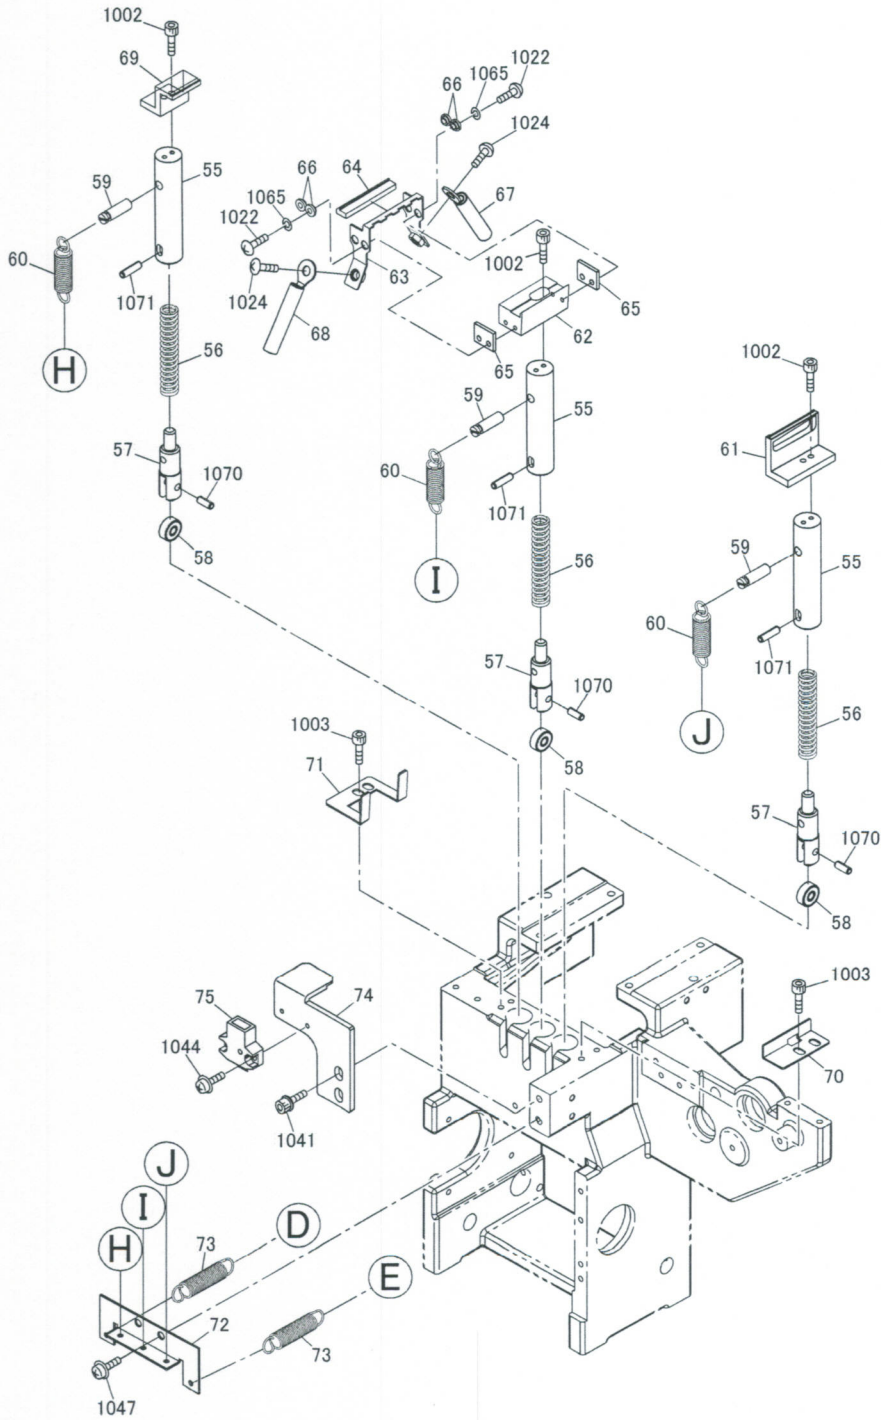

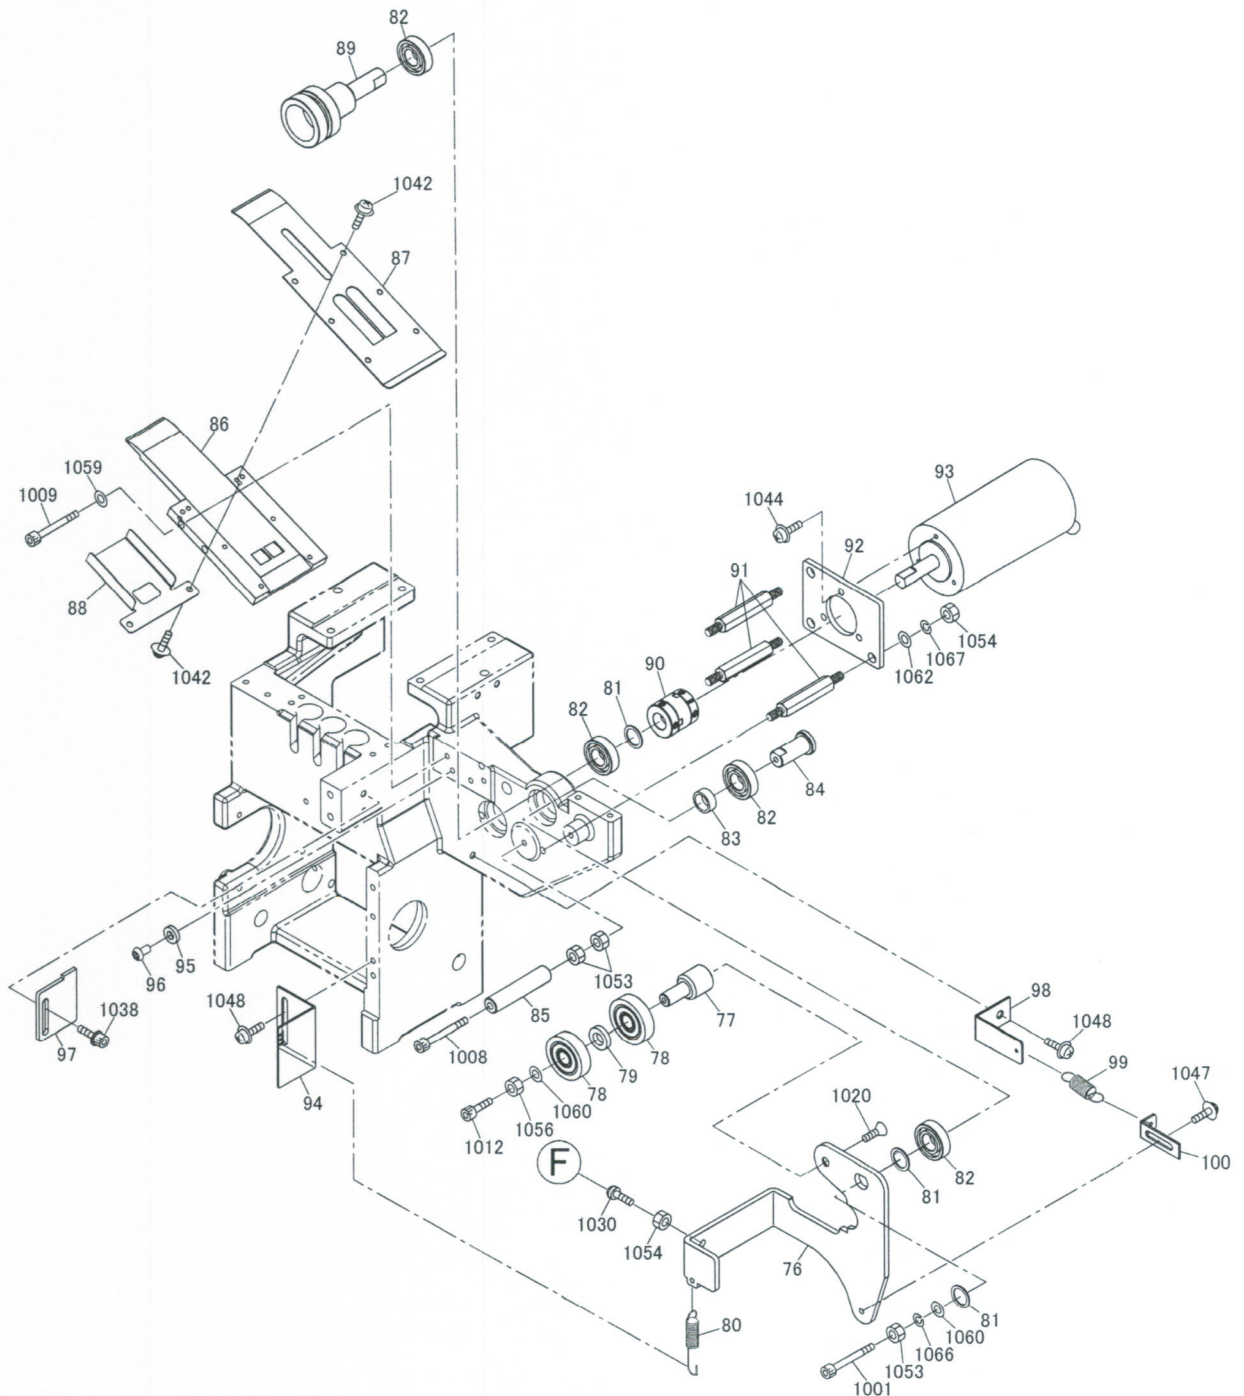

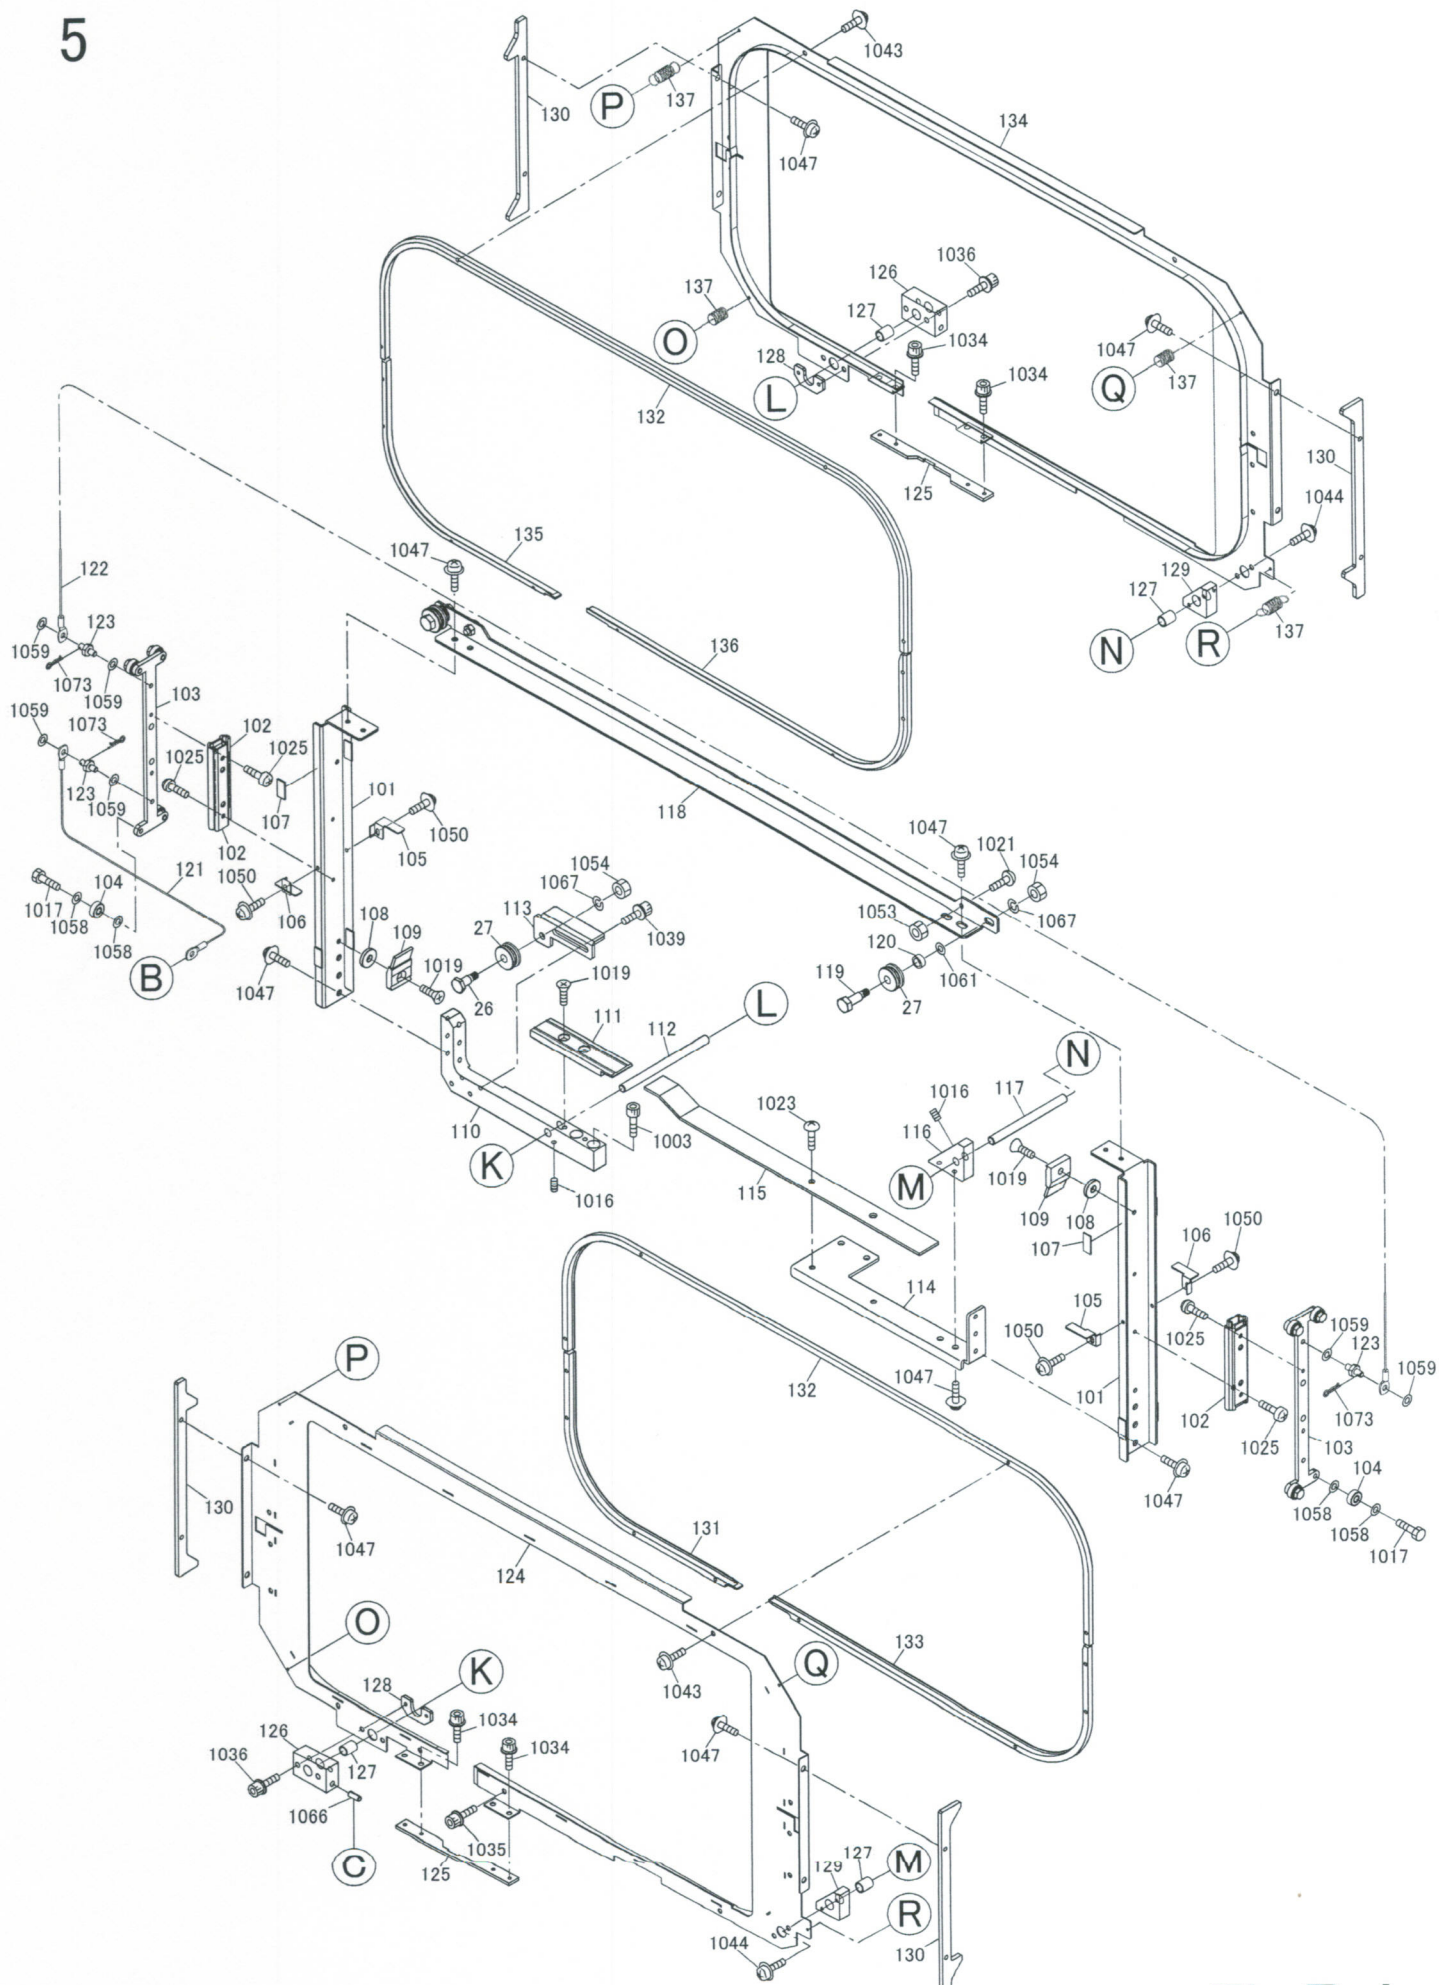

6

